

Artikel-Nr.	Für Ensat®	M 2	M 2,5	M 3	M 3,5	M 4	M 5	M 6	M 8	M 10	M 12	M 14	M 16	M 18	M 20	M 22	M 24	M 27	M 30
	Metrisch	...0 020.000	...0 025.000	...0 030.000	...0 035.000	...0 040.000	...0 050.000	...0 060.000	...0 080.000	...0 100.000	...0 120.000	...0 140.000	...0 160.000	...0 180.000	...0 200.000	...0 220.000	...0 240.000	...0 270.000	...0 300.000
	Whitworth	—	—	—	—	—	—	...0 525.000	...0 531.000	...0 537.000	...0 544.000	...0 550.000	...0 562.000	—	—	—	—	—	—
	UNC	—	—	...0 604.000	...0 606.000	...0 608.000	...0 610.000	...0 625.000	...0 631.000	...0 637.000	...0 644.000	...0 650.000	...0 662.000	—	—	—	—	—	—
	UNF	—	—	...0 704.000	...0 706.000	...0 708.000	...0 710.000	...0 725.000	...0 731.000	...0 737.000	...0 744.000	...0 750.000	...0 762.000	—	—	—	—	—	—
Maßtabelle																			
Werkzeugtyp 620 0... (kurze Version), 620 1... (Variante für Dünnwand-ENSAT®) und 621 0... (lange Version), 621 1... (Variante für Dünnwand-ENSAT®)																			
E ₁		8	8	8	8	8	12,5	12,5	12,5	16	16	25	25	25	25	25	30	30	30
SW		6,3	6,3	6,3	6,3	6,3	10	10	10	12,5	12,5	20	20	20	20	20	25	25	25
B		78	78	78	78	78	95	95	95	118	118	145	145	145	169	169	198	198	198
B ₁		40	40	40	40	40	50	50	50	60	60	60	60	60	60	60	60	60	60
E		18	18	18	18	18	24	24	24	32	32	50	50	50	58	58	70	70	70
E ₂		7	7	7	7	7	9	10	12	15	18	20	22	24	26	28	32	35	38
Werkzeugtyp 622 0... (kurze Version, verstärkte Ausführung für hohe Eindrehmomente) und 623 0... (lange Version, verstärkte Ausführung für hohe Eindrehmomente)																			
E		○	○	○	○	○	36	36	36	43	43	○	○	○	○	○	○	○	○
Werkzeugtyp 630 0... (kurze Version, Sechskant-Schaft) und 631 0... (lange Version, Sechskant-Schaft)																			
SW		11,11	11,11	11,11	11,11	11,11	11,11	11,11	11,11	11,11	11,11	11,11	11,11	11,11	—	—	—	—	—
B		71	71	71	71	71	83	83	83	98	98	118	118	118	—	—	—	—	—
Werkzeugtyp 635 0... (kurze Version, Sechskant-Schaft) und 636 0... (lange Version, Sechskant-Schaft)																			
SW		6,35	6,35	6,35	6,35	6,35	6,35	6,35	6,35	6,35	6,35	—	—	—	—	—	—	—	—
B		66	66	66	66	66	78	78	78	93	93	—	—	—	—	—	—	—	—
Werkzeugtyp 640 0... (kurze Version, Morsekegel-Schaft) und 641 0... (lange Version, Morsekegel-Schaft)																			
MK	MK0	MK0	MK0	MK0	MK0	MK0	MK2	MK2	MK2	MK3	MK3	MK4	MK4	MK4	MK4	MK4	MK4	MK4	MK4
B		○	○	○	○	○	○	○	○	○	176,5	○	222,5	○	○	○	○	○	○
Werkzeugtyp 626 0... (kurze Version, Innen-Vierkant-Schaft) und 627 0... (lange Version, Innen-Vierkant-Schaft)																			
SW		—	—	—	—	—	1/2"	1/2"	1/2"	1/2"	1/2"	1/2"	1/2"	1/2"	1/2"	1/2"	1/2"	1/2"	1/2"
B		—	—	—	—	—	94,5	94,5	94,5	117,5	117,5	140,5	140,5	140,5	168,5	168,5	197,5	197,5	197,5
Werkzeugtyp 610 2..., 610 3..., 610 4... (ab M 8), 610 4... (ab M 6) – (für ENSAT® mit Innensechskant)																			
E		—	—	—	—	6	8	10	10	12	14	16	18	—	—	—	—	—	—
B		—	—	—	—	80	90	100	100	110	125	125	125	—	—	—	—	—	—
SW		—	—	—	—	4,9	6,2	8	8	9	11	12	15	—	—	—	—	—	—
Werkzeugtyp 610 0..., 612 0... (Handwerkzeuge)																			
E		—	6	6	6	6	10	10	10	16	16	16	—	—	—	—	—	—	—
B		—	55	55	60	60	75	75	75	95	95	95	—	—	—	—	—	—	—
SW		—	5	5	5	5	8	8	8	12,5	12,5	12,5	—	—	—	—	—	—	—

Um das Längenmaß der verlängerten Werkzeugversionen zu erhalten, sind die angegebenen Maße B jeweils mit dem Maß B₁ zu addieren.

○ = auf Anfrage erhältlich