

Translation of the Original Operational Instructions

Please read these Operational Instructions carefully and follow them accordingly!

Ignoring these Instructions may lead to malfunctions or to clutch failure, resulting in damage to other parts.

Contents:

- Page 1:** - Contents
- Safety and Guideline Signs
- Safety Regulations
- Page 2:** - Clutch Illustration
- Page 3:** - Parts List
- Page 4:** - Technical Data
- Page 5:** - Technical Data
- Page 6:** - Design
- Scope of Delivery / State of Delivery
- Function
- General Installation Guidelines
- Page 7:** - Installation Preparations
- Installation
- Re-engagement
- Page 8:** - Torque Adjustment
- Page 9:** - Limit Switch
- Page 10:** - Maintenance and Maintenance Intervals
- Disposal
- Page 11:** - Malfunctions / Breakdowns

Safety and Guideline Signs

CAUTION



Danger of injury to personnel and damage to machines



Please Observe!
Guidelines on important points

Safety Regulations

These Installation and Operational Instructions (I + O) are part of the clutch delivery.
Please keep them handy and near to the clutch at all times.



It is forbidden to start initial operation of the product until you have ensured that all applicable EU directives and directives for the machine or system, into which the product has been installed, have been fulfilled.
At the time these Installation and Operational Instructions go to print, the EAS®-clutches accord with the known technical specifications and are operationally safe at the time of delivery.
Without a conformity evaluation, this product is not suitable for use in areas where there is a high danger of explosion.
This statement is based on the ATEX directive.

CAUTION



- ☐ If the EAS®-clutches are modified.
- ☐ If the relevant standards for safety and / or installation conditions are ignored.

User-implemented Protective Measures

- ☐ Cover all moving parts to protect against seizure, dust impacts or foreign body impact.
- ☐ The clutches may not be put into operation without an overload detection provided by the customer unless **mayr®** has been contacted and has agreed otherwise.

**To prevent injury or damage, only specialist personnel are allowed to work on the components. They must be familiar with the dimensioning, transport, installation, initial operation, maintenance and disposal according to the relevant standards and regulations.
Please read the Installation and Operational Instructions carefully prior to installation and initial operation of the device.**

These Safety Regulations are user hints only and may not be complete!



Installation and Operational Instructions for EAS®-HTL housed overload clutch, Type 4190._3400 Sizes 01 – 3

(B.4.15.7.EN)

Parts List (Only use *mayr*® original parts)

Item	Name
1	EAS®-compact® overload clutch
1.1	Hub
1.2	Pressure flange
1.3	Thrust washer
1.4	Adjusting nut
1.5	Locking ring
1.6	Hexagon head screw
1.7	Cup spring
2	Output shaft
3	Output-side flange
4	Drive-side flange
5	Distance ring
6	Deep groove ball bearing
7	Cap screw
8	Cap screw
9	Key DIN 6885/1
10	Limit switch
11	Type tag
12	Screw plug (for re-engagement bore)
13	O-ring

Installation and Operational Instructions for EAS®-HTL housed overload clutch, Type 4190._3400 Sizes 01 – 3

(B.4.15.7.EN)

Technical Data

Table 1

Size	Limit torques for overload M_G				Max. speed [rpm]
	Type 4190.53400 [Nm]	Type 4190.63400 [Nm]	Type 4190.73400 [Nm]	Type 4190.83400 [Nm]	
01	5 – 12.5	10 – 25	20 – 50	25 – 62.5	8000
0	10 – 25	20 – 50	40 – 100	50 – 125	7000
1	20 – 50	40 – 100	80 – 200	100 – 250	6000
2	40 – 100	80 – 200	160 – 400	200 – 500	5000
3	80 – 200	160 – 400	320 – 800	400 – 1000	4000

Table 2

Size	Tightening torque Item 1.6 [Nm]	Tightening torque Item 7 [Nm]	Tightening torque Item 8 [Nm]	Thrust washer stroke (Fig. 2; Item 1.3) on overload [mm]	Bore from – to [mm]
01	5.1	4.5	5	2.0	12 – 20
0	2.6	8.9	5	2.6	15 – 25
1	5.1	15.5	20	3.2	22 – 30
2	9	15.5	20	3.8	28 – 40
3	9	37	63	4.5	32 – 50

Table 3

Size	Type 4190.53400		Type 4190.63400		Type 4190.73400		Type 4190.83400	
	Maximum torque M_G [Nm]	Inspection dimension "a" (Fig. 6) at approx. 70 % M_G [mm]	Maximum torque M_G [Nm]	Inspection dimension "a" (Fig. 6) at approx. 70 % M_G [mm]	Maximum torque M_G [Nm]	Inspection dimension "a" (Fig. 6) at approx. 70 % M_G [mm]	Maximum torque M_G [Nm]	Inspection dimension "a" (Fig. 6) at approx. 70 % M_G [mm]
01	12.5	2.0	25	1.1	50	1.5	62.5	0.7
0	25	2.4	50	1.4	100	2.4	125	1.4
1	50	2.9	100	1.7	200	2.6	250	1.4
2	100	3.8	200	2.4	400	3.1	500	1.7
3	200	4.2	400	2.3	800	3.6	1000	1.8

Table 4 (for Dimensions see Fig. 3 on page 7)

Clutch size	Motor size	Dimension h [mm]	Dimension h ₂ [mm]	Dimension h ₁ [mm]	Permitted ambient temperature	Weight [kg]
01	80	40	40	55	-20 °C to +80 °C	7.7
0	90	50	50	63	-20 °C to +80 °C	9.4
1	100	60	60	79	-20 °C to +80 °C	17.4
2	132	80	80	93	-20 °C to +80 °C	24.9
3	160	110	110	126	-20 °C to +80 °C	36.2
3	180	110	110	126	-20 °C to +80 °C	36.8
01	56C	2.06"	2.06"	2.32"	-20 °C to +80 °C	6.7
01	143TC	2.12"	2.12"	2.32"	-20 °C to +80 °C	6.7
1	184TC	2.87"	2.87"	3.16"	-20 °C to +80 °C	18.5
2	215TC	3.37"	3.37"	3.43"	-20 °C to +80 °C	20.0
2	256TC	4.00"	4.00"	4.06"	-20 °C to +80 °C	20.9

Installation and Operational Instructions for EAS®-HTL housed overload clutch, Type 4190._3400 Sizes 01 – 3

(B.4.15.7.EN)

**Table 5: Screws for Customer-side Attachment onto the Flange “Y” and Flange “Z”
with Respective Tightening Torque**

Clutch size	Motor size	Screws with a strength class of 8.8 (number of pieces per flange)	Tightening torque
01	80	4 x M10	43 Nm
0	90	4 x M10	43 Nm
1	100	4 x M12	74 Nm
2	132	4 x M12	74 Nm
3	160	4 x M16	183 Nm
3	180	4 x M16	183 Nm
01	56C	4 x 3/8"-16 UNC	37 Nm
01	143TC	4 x 3/8"-16 UNC	37 Nm
1	184TC	4 x 1/2"-13 UNC	88 Nm
2	215TC	4 x 1/2"-13 UNC	88 Nm
2	256TC	4 x 1/2"-13 UNC	88 Nm

Table 6: Max. Permitted Bearing Loads

Clutch size	Motor size	Axial forces [N]	Radial forces [N]	Transverse force torque B ¹⁾ (Fig. 3) referring to the clutch flange [Nm]	Transverse force torque C ²⁾ (Fig. 3) referring to the housing [Nm]
01	80	200	400	5	318
0	90	300	600	10	495
1	100	350	700	20	765
2	132	350	700	30	1568
3	160	500	1000	40	1872
3	180	500	1000	40	2912
01	56C	100	200	5	318
01	143TC	200	400	5	318
1	184TC	350	700	20	995
2	215TC	350	700	30	995
2	256TC	350	700	30	995



¹⁾ Value B indicates torques which put strain on the deep groove ball bearing due to the non-centric axial forces having an effect on the pressure flange.

²⁾ Value C refers to purely static loads. In case of oscillation or vibration occurrence, please use a safety factor of 2.5.

Installation and Operational Instructions for EAS®-HTL housed overload clutch, Type 4190._3400 Sizes 01 – 3

(B.4.15.7.EN)

Design

The EAS®-HTL overload clutch is designed as a mechanically disengaging overload clutch, based on the ball detent principle. It is designed as a housed clutch (Protection IP 53) for attachment to an IEC B5 flange according to DIN EN 50347 or a NEMA flange. The connection dimensions are designed according to the motor sizes 80, 90, 100, 132, 160, 180, or 56 C, 143 TC, 184 TC, 215 TC and 256 TC.

EAS®-HTL clutches as a complete unit provide overload protection between the motor and the gearbox.

The input and output are separated residual torque-free.

A signal is emitted via the limit switch (10) which can be used to shut down the entire system or machine.

After-acting masses can slow down freely.

CAUTION



After overload occurrence, the clutch has no load-holding function.

Scope of Delivery / State of Delivery

- ☐ The clutch is manufacturer-assembled ready for installation.
- ☐ The torque is set manufacturer-side according to the customer's request (please compare the torque stipulated in the order with the torque imprinted/engraved in the identification).
Unless the customer requests a particular torque setting when ordering, the clutch will be pre-set to approx. 70 % of the maximum torque.
- ☐ The limit switch has been adjusted as capable of function manufacturer-side.

Please check the scope of delivery according to the Parts List as well as the state of delivery immediately after receiving the goods. *mayr®* will take no responsibility for belated complaints. Please report transport damage immediately to the deliverer. Please report incomplete delivery and obvious defects immediately to the manufacturer.

Function

The clutch protects the drive line from excessively high, unpermitted torque impacts which can occur due to unintentional blockages.

After overload has taken place, the transmitting mechanism is completely disconnected. Only the bearing friction continues to have an effect.

This means that no re-engagement impacts or metallic sliding movements occur on the clutch torque transmission geometries when using this clutch variant.

In order to make the clutch ready for operation again after an overload occurrence, the clutch must be re-engaged.

When in operation, the set torque is transmitted backlash-free onto the output from the motor shaft via the EAS®-compact® overload clutch (pressure flange (1.2)).

If the set limit torque is exceeded (overload), the clutch disengages and remains disengaged.

General Installation Guidelines

- ☐ **Important!**
EAS®-HTL clutches do not compensate for shaft misalignments.
- ☐ Do not introduce radial / axial forces onto the clutch bearing due to component distortion.
- ☐ Minimum screw quality 8.8 for customer-side attachment.
- ☐ Please observe the max. permitted bearing loads acc. Table 6.



The determination of the max. permitted bearing load is based on a nominal lifetime estimation of 32000 h according to the usual specifications provided by the bearing manufacturers.

Possible bearing distortion must be ruled out via temperature measurement on the housing in the deep groove ball bearing (6) area during initial operation: $\Delta T \leq 40 \text{ °C}$

The steady-state temperature must be evaluated.

Installation and Operational Instructions for EAS®-HTL housed overload clutch, Type 4190._3400 Sizes 01 – 3

(B.4.15.7.EN)

Installation Preparations (Customer-side)

- ❑ Bore and shaft surface quality:
Ra = 1.6 µm acc. DIN EN ISO 4287.
- ❑ Shaft material: Yield point at least 400 N/mm²,
e. g. St 60, St 70, C 45, C 60.
- ❑ Bore tolerance: F7
- ❑ Shaft tolerance: k6.
- ❑ Shape and position tolerances (flange geometry):
Manufactured for clutch transmission part acc. Fig. 3.

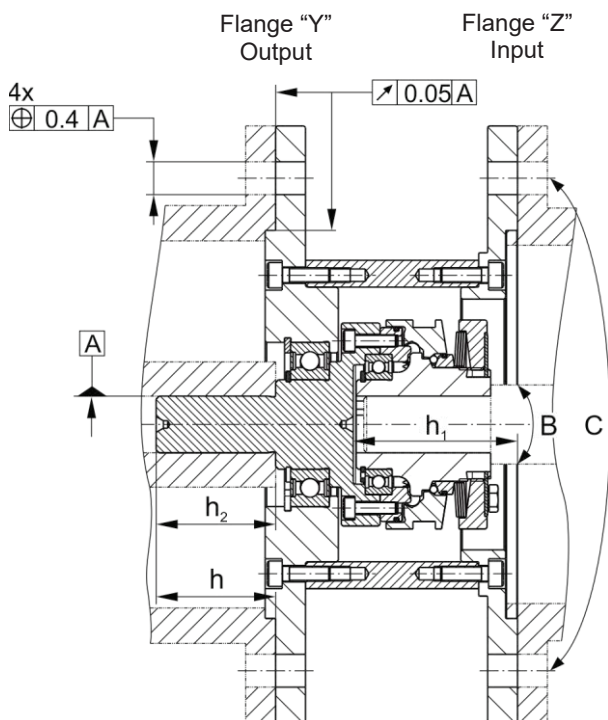


Fig. 3

Installation (Figs. 1 to 3)

- ❑ Join the manufacturer-assembled and adjusted clutch on the output side, turn it to the correct position (flange bores must align with the fixing threads) and bolt it together with the mounting part (flange "Y").
Please observe the attachment specifications indicated in Tables 5 and 6.



Please observe clutch dimensions h and h₂ (see Table 4 and Fig. 3).

- ❑ Insert flange "Z" with the shaft into the clutch hub bore (Item 1.1) or in the flange inner centering (Item 4), turn it to the correct position (flange bores must align with the fixing holes) and bolt it together with the mounting part (flange "Z").
Please observe the attachment specifications indicated in Tables 5 and 6.



Please observe the dimension h₁ (see Table 4 and Fig. 3).
The maximum permitted shaft length is:
h₁ - 2 mm.

Re-engagement (Fig. 4)



Re-engagement must only take place when the device is not running.

There are two bores (180° offset to one another) for manual clutch re-engagement. They are locked with screw plugs (12). In order to re-engage the clutch, at least one of the two screw plugs (12), including its O-ring (13), must be loosened and removed. EAS®-compact® overload clutch re-engagement is carried out by applying axial pressure to the thrust washer (1.3) in the direction of the output (flange Y) using a suitable lever tool (Fig. 4). It may be necessary to turn slightly between the pressure flange (1.2) and the thrust washer (1.3).



Please make sure that the bore threads (for screw plugs Item 12) in the distance ring (5) are not damaged by the lever tool.

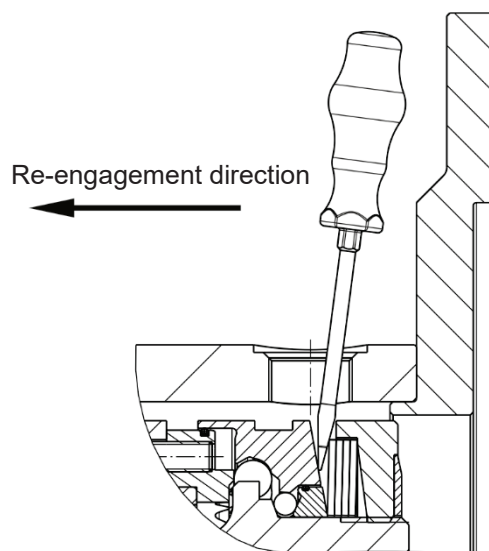


Fig. 4

After re-engagement has been completed successfully, the access bore must be re-closed using the screw plug (12) and the O-ring (13) placed under it.

Installation and Operational Instructions for EAS®-HTL housed overload clutch, Type 4190._3400 Sizes 01 – 3

(B.4.15.7.EN)

Torque Adjustment

The torque is set manufacturer-side according to the customer's request.

Torque adjustment is carried out by turning the adjusting nut (1.4). The installed cup springs (1.7) are operated in the negative range of the characteristic curve (see Fig. 7); this means that a stronger pre-tensioning of the cup spring results in a decrease of the spring force.

If no particular torque adjustment is requested customer-side, the clutch will always be **pre-set and marked** (calibrated) manufacturer-side to approx. 70 % of the maximum torque.

It is possible to check the **"Spring operation in the operating range"** (Fig. 7) using the dimension "a" (distance from the adjusting nut (1.4) facing side to the hub (1.1) facing side, as shown in Fig. 6).

Please see Table 3 for the respective values.



Turning the adjusting nut (1.4) clockwise causes a reduction in torque.
Turning it anti-clockwise causes an increase in torque.
You should be facing the adjusting nut (1.4) as shown in Figs. 5 and 6.

Changing the Torque

- a) Please convert the required torque using the formula below into percent of the maximum adjustment value (see Table 3).

Required torque adjustment	
max. adjustment value	x 100 = Adjustment in %

- b) Remove both locking screws (hexagon head screws Item 1.6) from the adjusting nut (1.4).
c) Turn the adjusting nut (1.4) using the adjustment scale on the outer diameter of the adjusting nut (Item 1.4 / Fig. 6) clockwise or anti-clockwise using a hook wrench until the required torque is reached. The required torque results from the marking overlap on the locking ring (1.5) as well as on the adjusting nut (1.4) and the percent value of the adjustment scale on the adjusting nut (1.4), as shown in Fig. 6.
d) If necessary, the adjusting nut (1.4) must be turned slightly, so that both threaded holes for the locking screws (1.6) align with one of the bores in the locking ring (1.5).
e) Paint both locking screws (1.6) with Loctite 243 and screw them into the adjusting nut (1.4).



Adjusting the adjusting nut (1.4) or distorting the cup spring (1.7) outside of the cup spring characteristic curve (see Fig. 7) stops the clutch functioning.

The inspection dimension "a" (see Table 3) can show deviations due to construction tolerances or to clutch wear.



If the locking screws (1.6) are not screwed back in again, the lock washer is not secured and the torque adjustment is not consistent.

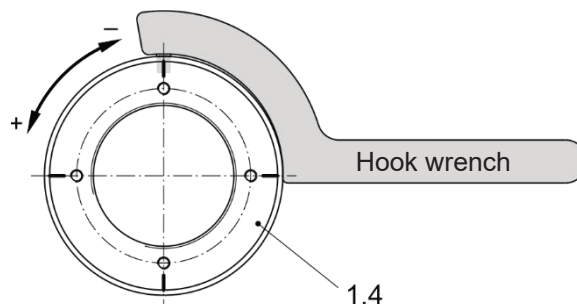


Fig. 5

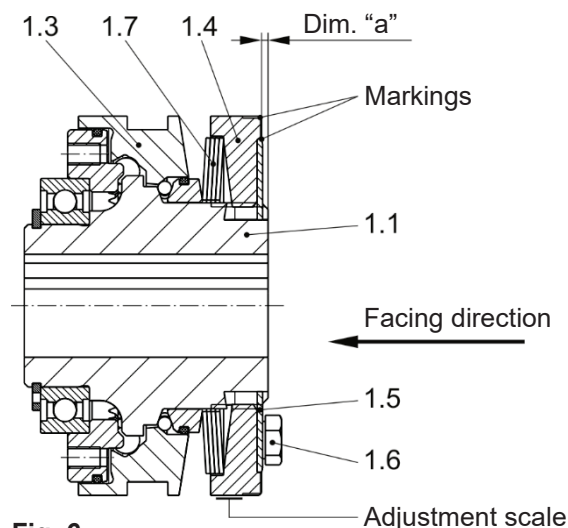


Fig. 6

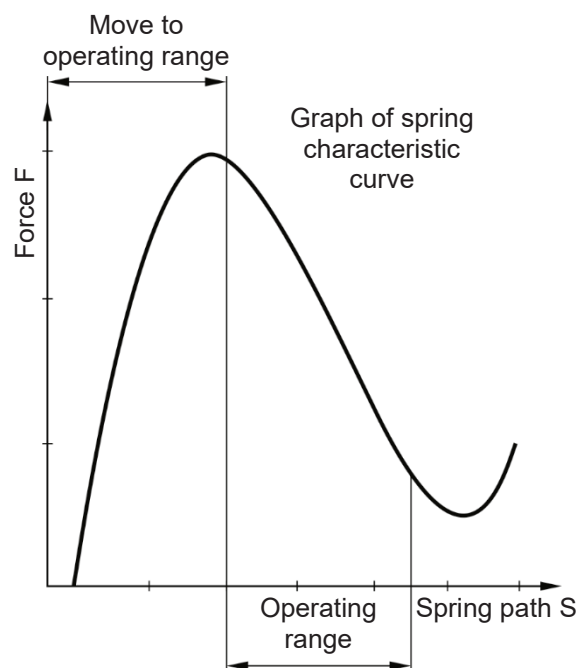


Fig. 7

Installation and Operational Instructions for EAS®-HTL housed overload clutch, Type 4190._3400 Sizes 01 – 3

(B.4.15.7.EN)

Limit Switch (Item 10, Fig. 1)

General Characteristics

Approvals / Conformity:	CE cULus EAC
Basic standard:	IEC 60947-5-2
Protection acc. IEC 60529:	IP68 acc. BWN Pr 20
Operating indication:	yes
Protected against reverse polarity:	yes
Operating voltage indication:	no
Protection class:	II
Short-circuit protection:	yes
MTTF:	830 a


Electrical Characteristics

Rated operating voltage U_e :	24 VDC
Rated insulation voltage U_i :	250 VDC
Rated operating current I_E :	200 mA
Rated short-circuit current:	100 A
Operating voltage U_B max.:	30 VDC
Operating voltage U_B min.:	10 VDC
Electrical design:	DC, direct voltage
Smallest operating current I_m :	0 mA
Load capacitance (at U_E) max.:	$\leq 0.5 \mu\text{F}$
No-load current I_0 , damped, max.:	$\leq 9 \text{ mA}$
No-load current I_0 , undamped, max.:	$\leq 3 \text{ mA}$
Residual ripple content max:	$\leq 15 \% \text{ of } U_e$
Switching output:	PNP
Switching frequency f (at U_E) max.:	$\leq 3000 \text{ Hz}$
Switching function:	NO contact
Voltage drop static max.:	2.5 V


Mechanical Characteristics

Number of conductors:	3
Tightening torque:	8 Nm
Fixing length:	34 mm
Rated switching distance S_n :	1.5 mm
Diameter d_1 :	M8 x 1
Assured switching distance S_a :	1.2 mm
Cable diameter D max.:	3.2 mm
Cable length:	3 m
Conductor cross-section:	0.14 mm ²
Mechanical installation condition:	flush
Real switching distance S_r :	1.5 mm
Depth:	35 mm
Ambient temperature T_a max.:	70 °C
Ambient temperature T_a min.:	-25 °C
Active surface material:	PBT
Housing material:	stainless steel
Cable sheath material:	PUR

Detail Drawing

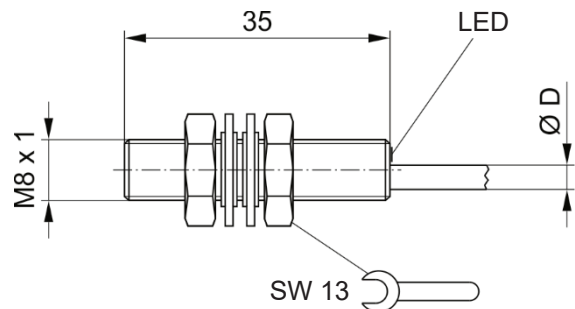

Wiring Diagram

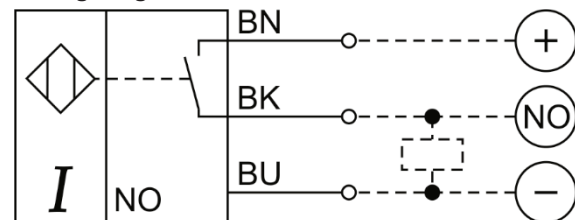

Adjustment

The limit switch (PNP NO contact; Item 10) for the EAS®-HTL clutch has been adjusted and countered manufacturer-side. However, as the final clutch position is defined via the customer-side attachment, re-adjustment may be necessary.

This is carried out as follows:

- ☐ Loosen the counter nut on the limit switch. Screw in the limit switch up to its limit (limit switch damped).
- ☐ Unscrew the limit switch until it switches (limit switch undamped).
- ☐ Screw in the limit switch again carefully until it switches (limit switch is damped again), then continue for another 90°.
- ☐ Counter the limit switch.
- ☐ The correct switch adjustment must be checked and guaranteed by manually disengaging the overload clutch.



In order to secure limit switch function, please keep it free from oil, grease and other dirt particles.

Installation and Operational Instructions for EAS®-HTL housed overload clutch, Type 4190._3400 Sizes 01 – 3

(B.4.15.7.EN)

Maintenance and Maintenance Intervals

The following maintenance and inspection intervals are to be maintained:

1.) Before initial operation:

- Visual inspection. Inspection of the installation parameters (misalignment and tightening torques (see Table 2)) and the clutch running behavior
- Inspection for possible bearing distortions (see the Installation Guidelines on page 6 and Table 6)

2.) After 5 to 10 operating hours:

- Check the tightening torques produced

3.) After 1000 h, at the latest after 3 months:

- Visual inspection
- Inspection of the screw tightening torques
The specified tightening torques (see Table 2/5) must be maintained.
- Inspection of the misalignment and the clutch running behavior
- Inspection of the bearing or bearing pre-tension (temperature inspection/temperature monitoring)

4.) If no irregularities or wear are found during the maintenance and inspection interval defined in point 3.), further inspection intervals can, with unchanged operating parameters, take place **after 2000 operating hours, after 1000 disengagements or after maximum 12 months**. The following work must be carried out:

- Visual inspection
- Functional inspection
- Inspection of the shaft-hub connection
- Inspection of the screw tightening torques
The specified tightening torques (see Table 2/5) must be maintained.
- Inspection of the set torque
- Clutch release inspection
- Inspection of the bearing or bearing pre-tension (temperature inspection/temperature monitoring)
- Inspection of the misalignment and the clutch running behavior

We recommend that this maintenance work is carried out at the site of manufacture:

- Re-greasing of the transmission geometries, balls, recesses and sealing elements.

Clutch re-greasing must only be carried out at the place of manufacture or by specially trained personnel.

For greasing, please use NLGI Class 1.5 grease with a basic oil viscosity of 460 mm²/s at 40 °C, e.g. Mobilith SHC460.

When re-installing the clutch, please secure all screws with Loctite 243 (medium hard).

If large amounts of dirt or dust are present or in extreme ambient conditions, it may well be necessary to carry out inspections at shorter maintenance intervals.

If wear or damages are detected on the clutch in general, the affected components must be replaced immediately and the cause of the malfunction must be determined.

Causes of malfunctions could be:

- a) Excessive misalignment
- b) Excessive load (load alternations, start-up impacts, overload)
- c) Ambient influences

Wear or damage on the clutch manifest themselves as:

- a) Noise development
- b) Troubled running behavior, vibration occurrences
- c) Formation of cracks on the components
- d) Warming
- e) Loosening of the components
- f) Friction tracks



Should any irregularities occur, the system must be stopped independently of imminent maintenance and inspection intervals, and the cause of the malfunction must be determined using the Malfunctions / Breakdowns Table.

Disposal

Electronic components (Limit switch):

Products which have not been disassembled can be disposed of under Code No. 160214 (mixed materials) or components under Code No. 160216, or can be disposed of by a certified disposal firm.

Steel components:

Steel scrap (Code No. 160117)

All aluminum components:

Non-ferrous metals (Code No. 160118)

Seals, O-rings, V-seals, elastomers:

Plastic (Code No. 160119)

Installation and Operational Instructions for EAS®-HTL housed overload clutch, Type 4190._3400 Sizes 01 – 3

(B.4.15.7.EN)

Malfunctions / Breakdowns

Malfunction	Possible Causes	Solutions
Premature clutch release	Incorrect torque adjustment	<ol style="list-style-type: none"> 1) Set the system out of operation 2) Check the torque adjustment 3) Secure the adjusting nut 4) If the cause of malfunction cannot be found, the clutch must be inspected at the place of manufacture
	Adjusting nut has changed position	
	Worn clutch	
Clutch does not release on overload	Incorrect torque adjustment	<ol style="list-style-type: none"> 1) Set the system out of operation 2) Check whether foreign bodies influence the disengagement mechanism function 3) Check the torque adjustment 4) Secure the adjusting nut 5) If the cause of malfunction cannot be found, the clutch must be inspected at the place of manufacture
	Adjusting nut has changed position	
	Disengagement mechanism blocked by a foreign body	
	Worn clutch	
Running noises on overload occurrence as clutch slows down	Bearing on output flange is worn or has been previously damaged	<ol style="list-style-type: none"> 1) Set the system out of operation 2) Inspect the clutch at the place of manufacture
	Housing bearing is worn or has been previously damaged	
	Worn disengagement mechanism	
Running noises in normal operation	Insufficient clutch securement	<ol style="list-style-type: none"> 1) Set the system out of operation 2) Check the clutch securement 3) Check the screw tightening torques 4) Check the torque adjustment and that the adjusting nut sits securely
	Loosened screws	
	Loosened adjusting nut	



mayr® will take no responsibility or guarantee for replacement parts and accessories which have not been delivered by mayr®, or for damage resulting from the use of these products.